

FREESTYLE BRAKE LEVER

1. Lever installation

Clamp levers R (right) and L (left) to handlebar with 5mm Allen key. Final tightening torque: 6-8Nm.


Freestyle levers have 2 piece hinged clamp.

2. Cable installation

Pass brake inner cable through slot in lever bracket and place brake-cable nipple firmly into nipple slot. Set adjusting-barrel so as to enable later adjustment. Ensure brakes are properly installed.



Lever showing single upper nipple slot

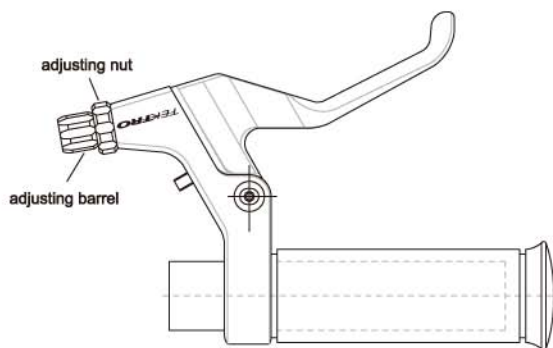

3. Test lever by depressing it a few times. Turn adjusting barrel to recommended pad/rim clearance (1mm each side on most brakes).

Consult your TEKTRO dealer if you are unsure about installation or adjustment.

CATION

TEKTRO IS NOT LIABLE FOR DAMAGE OR INJURY AS A RESULT OF IMPROPER INSTALLATION OR USE.

INSTALLATION INSTRUCTIONS INSTALLATIONS ANLEITUNG INSTRUCTIONS D'INSTALLATION INSTRUCCIONES DE INSTALACIÓN インストールの手順

FREESTYLE Brake Lever FREESTYLE BREMS HEBEL LEVIERS DE FREINS FREESTYLE MANETAS DE FRENOS FREESTYLE FREESTYLE ブレーキレバー

Freestyle lever are for use on 1" handlebars. An adapter sleeve is included for use on 7/8" handlebars.

Freestyle-Hebel sind für die Verwendung auf 1" Zoll-Lenkern gedacht. Eine adapterhülse ist zur Verwendung auf 7/8" Zoll-Lenkern beigefügt.

Les leviers Freestyle sont destinés aux cintres de 1". Une bajou d'adaptation est comprise pour l'utilisation sur des contres de 7/8".

Manetas Freestyle son para usar en manillas de 1". Se incluye una manga de adaptador para usar en las manillas de 7/8".

Freestyle レバー は直径 1 インチのハンドルバー用ですが付属のアダプターを使用して直径7/8 インチのハンドルバーにも装着が可能です。

TEKTRO
TEKTRO TECHNOLOGY CORPORATION

http:// www.tektro.com
E-mail: info@tektro.com.tw

Edition-July, 2010-C1