


## Bottom Bracket Installation - PF30

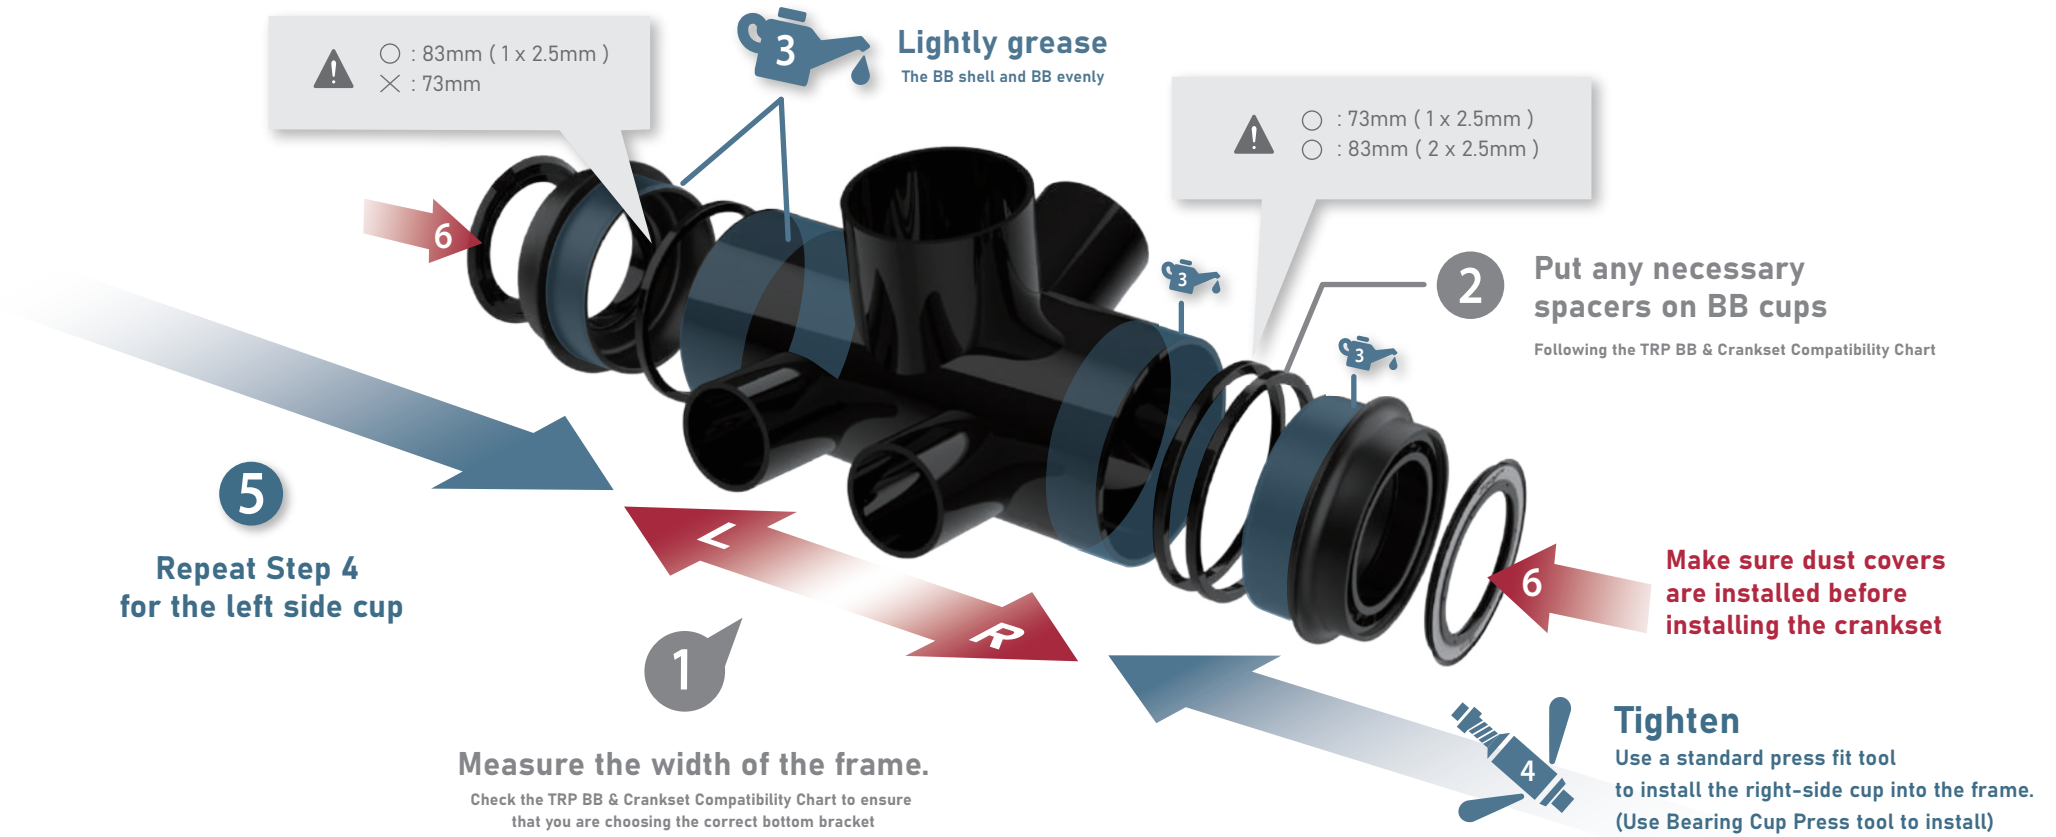

Determine the type of your BB shell	BB shell frame width	BB model	Fully assembled width	Non-drive side spacer usage	Drive side spacer usage	Use the following crankset
PF30 BB-M8020 	73mm (MTN)		96mm	( Left Side ) ×	( Right Side ) 1 x 2.5mm	FC-M9050 FC-M8050
	83mm (DH)		111mm	1 x 2.5mm	2x 2.5mm	FC-M8070