


## Installation order and direction

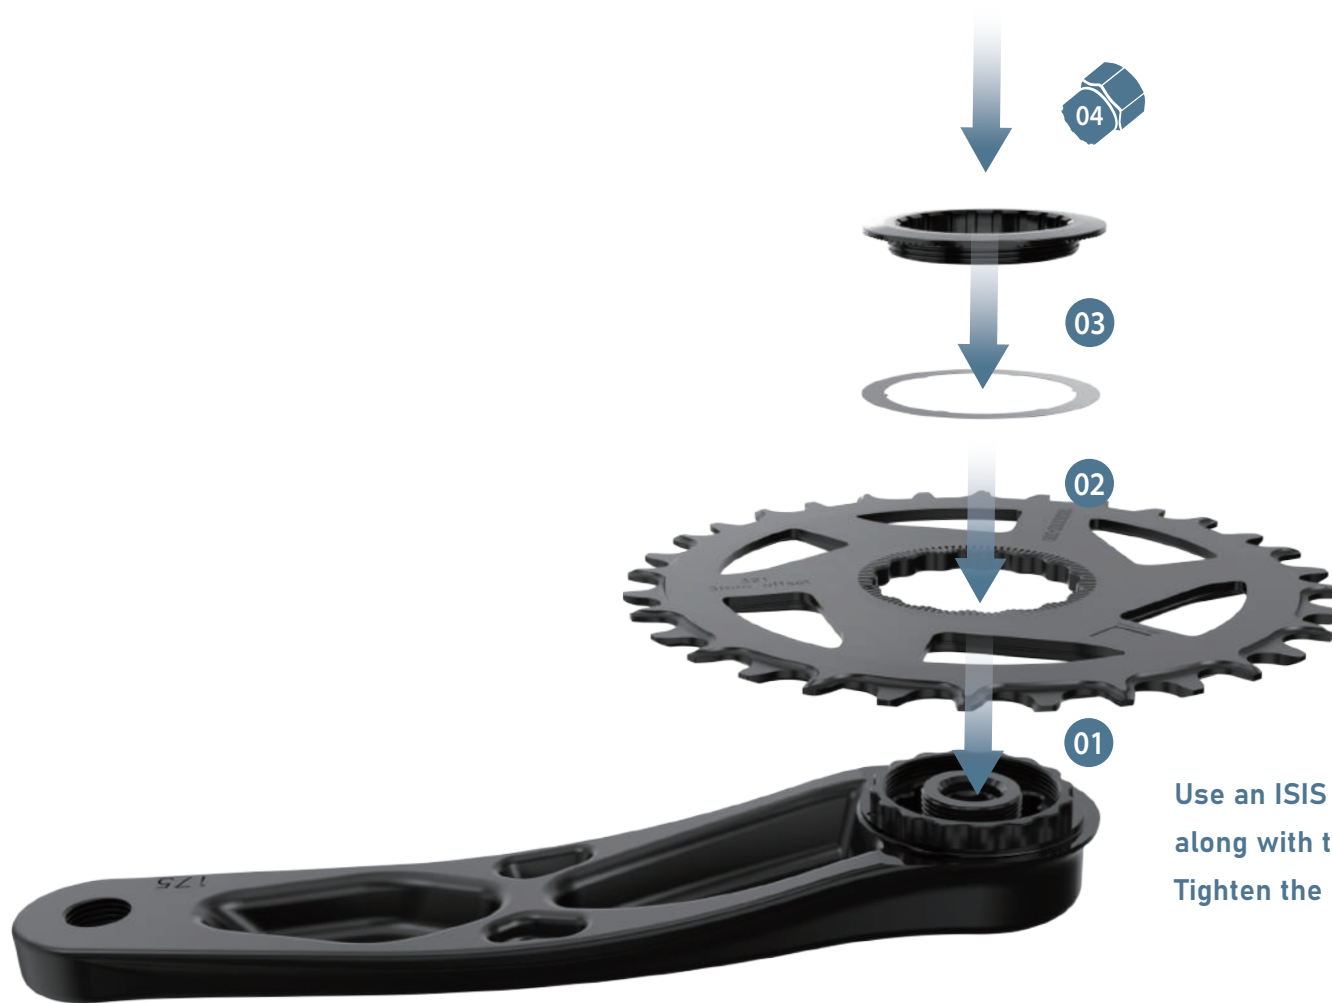

Use an ISIS Drive™ BB tool to install the chainring lockring along with the 35 x 44 x 0.1 washer onto the drive-side crank. Tighten the lockring to 40 Nm (30ft-lbs).